


# DRM

500/600/700/900mm

Architectural feature luminaire.

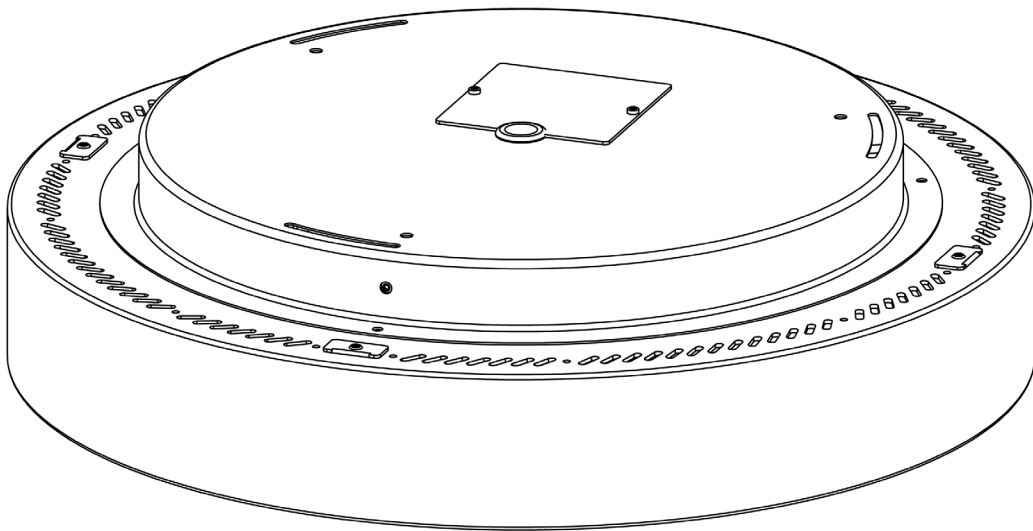


P&A

DRM


As Standard

- Luminaire.
- Ceiling mounting plate
- 3 x M4x20mm Locking screws.
- Please check thoroughly before installing and report any missing components.

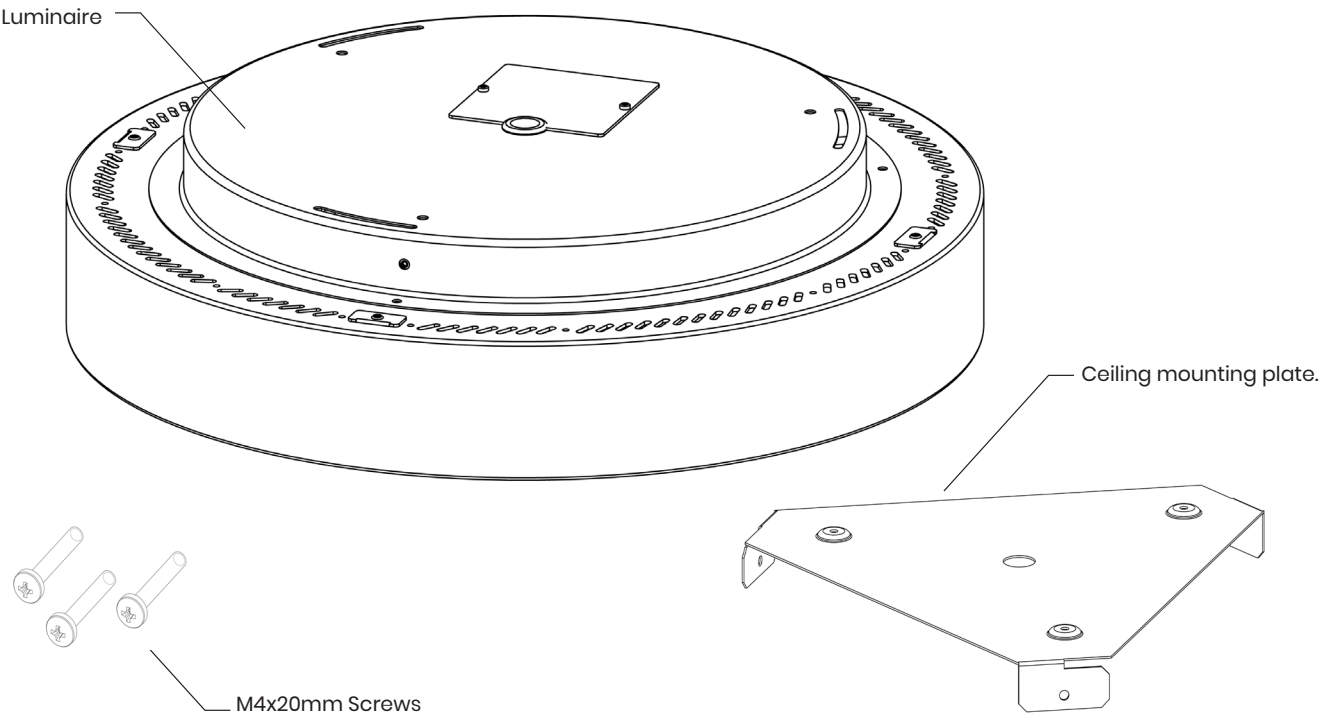


Nominal Diamters			
Products			
	DØ	H	Kg
DRM5	500	116	3
DRM6	600	116	4
DRM7	700	116	5
DRM9	900	116	8


- 1** Install ceiling mounting bracket “using 3 x fixing holes” to desired surface. (Appropriate fixings supplied by others)

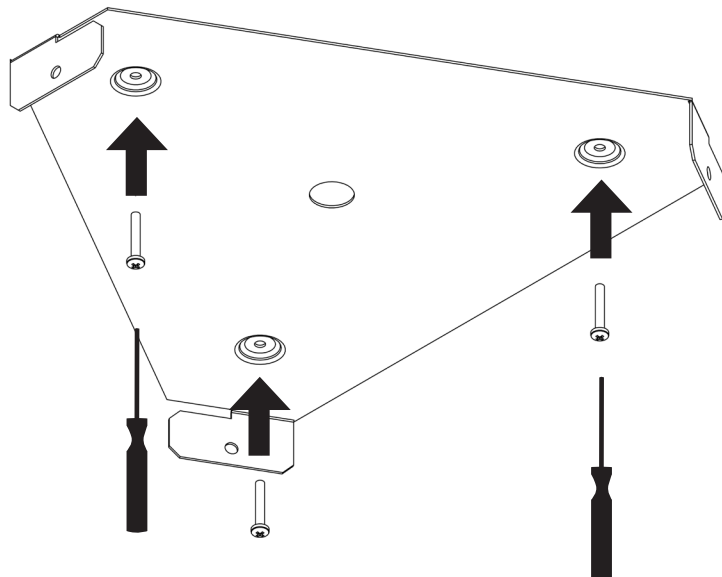


- 2** Feed Incoming supply (provided by others) through cable entry hole.

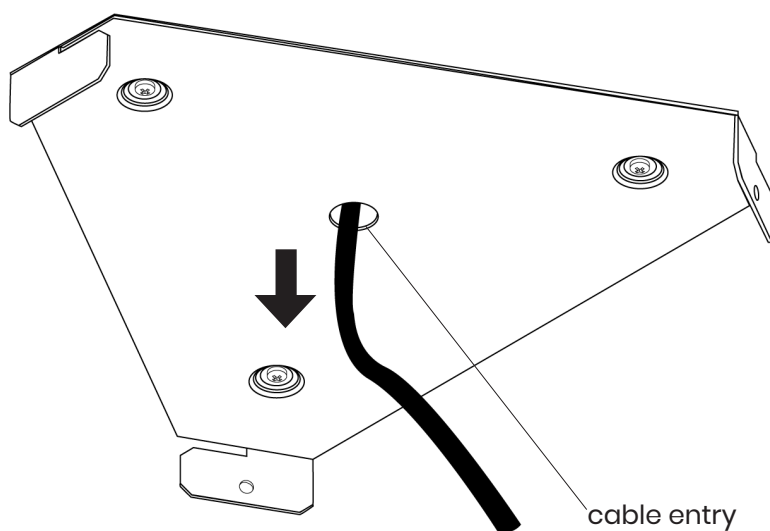


- 3** Please remove the two electrical plate cover screws, and remove the electrical cover plate.

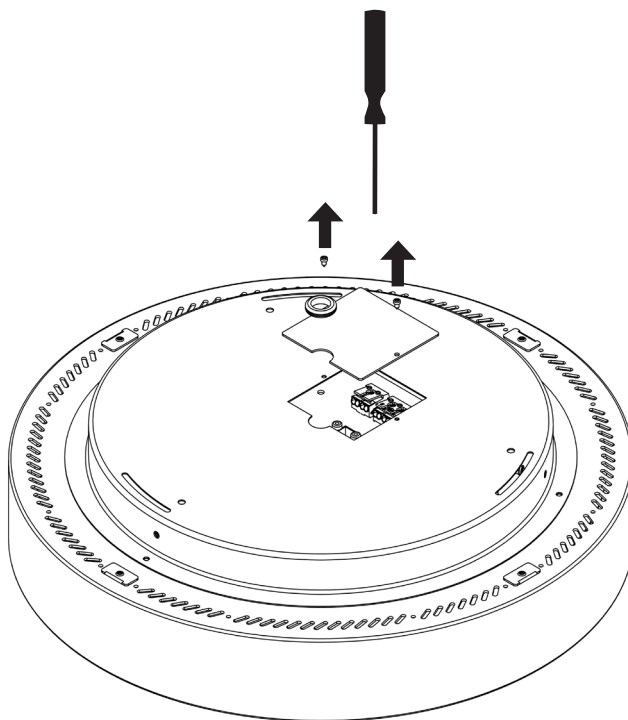

- 4** Feed Incoming supply cable, through cable gland and cable restraint. Connect to terminal block and please ensure cable restraint is secure. (See pages 7-9 for all wiring diagrams)

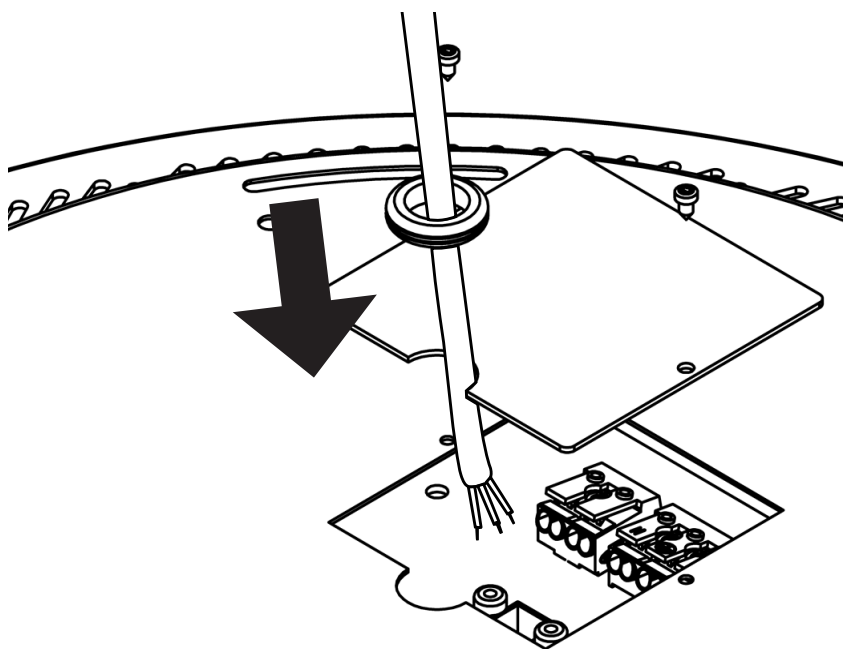


- 5** Please re-attach the electrical cover plate using the two screws.

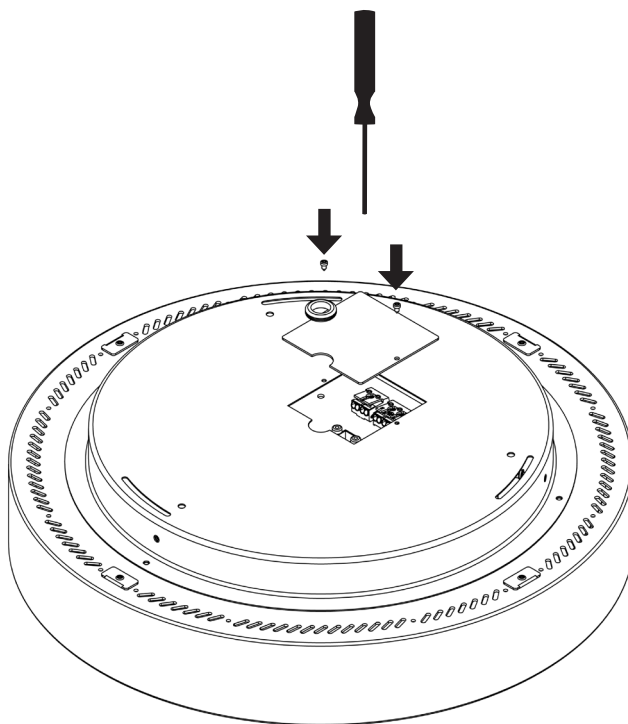


- 6** **A.** Offer up luminaire to mounting bracket. **B.** Rotate luminaire clockwise so that its fully inserted into all three bayonet connectors.

**A.**

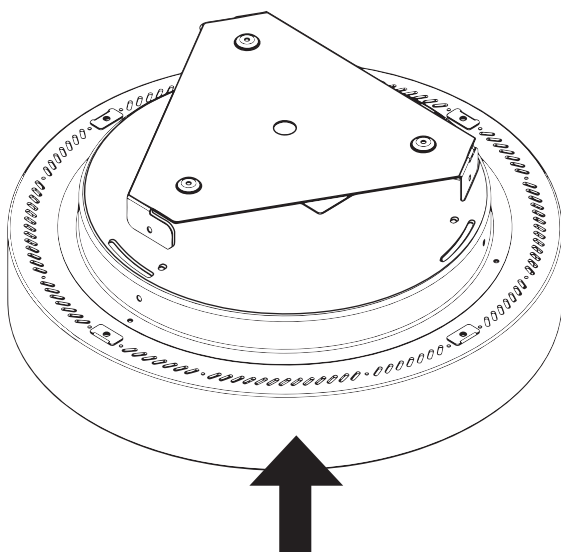


**B.**

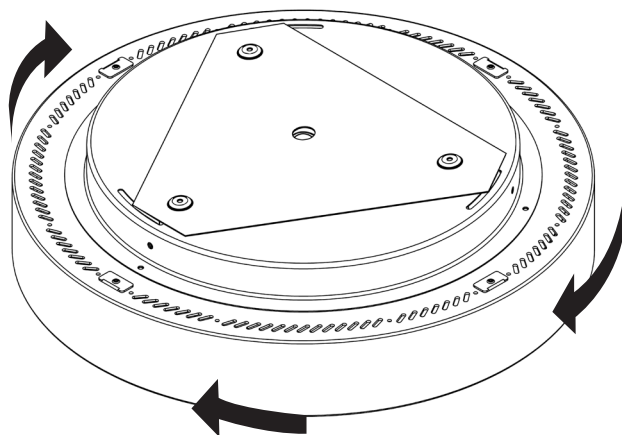


**7**

Once the luminaire has been rotated onto the surface mount plate, Secure using three M4x20mm locking screws (Supplied).

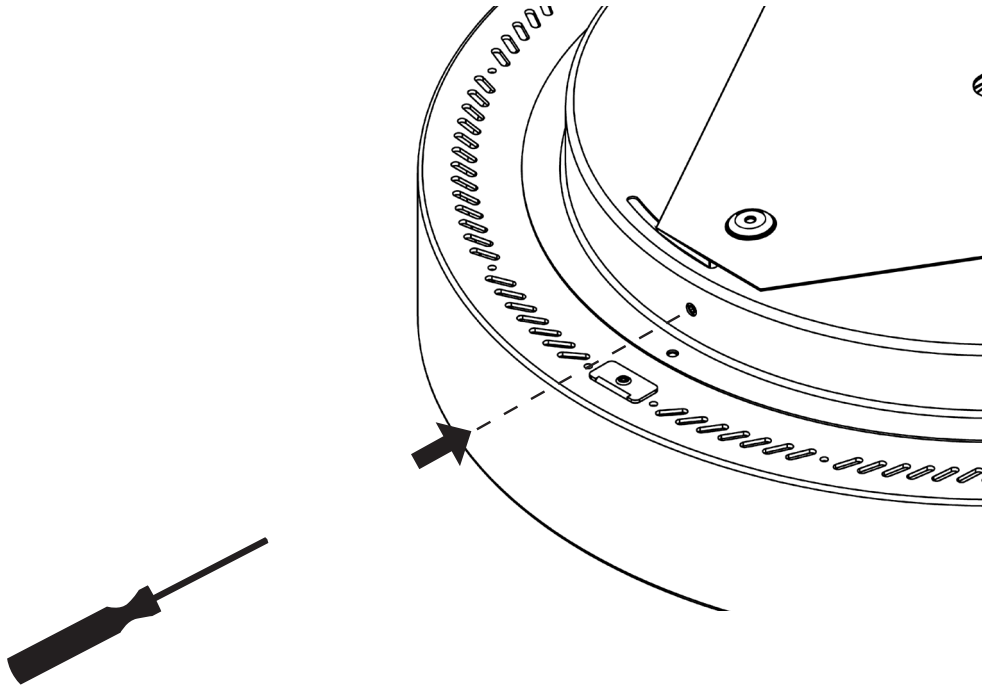**8**


Complete installation (Front View)

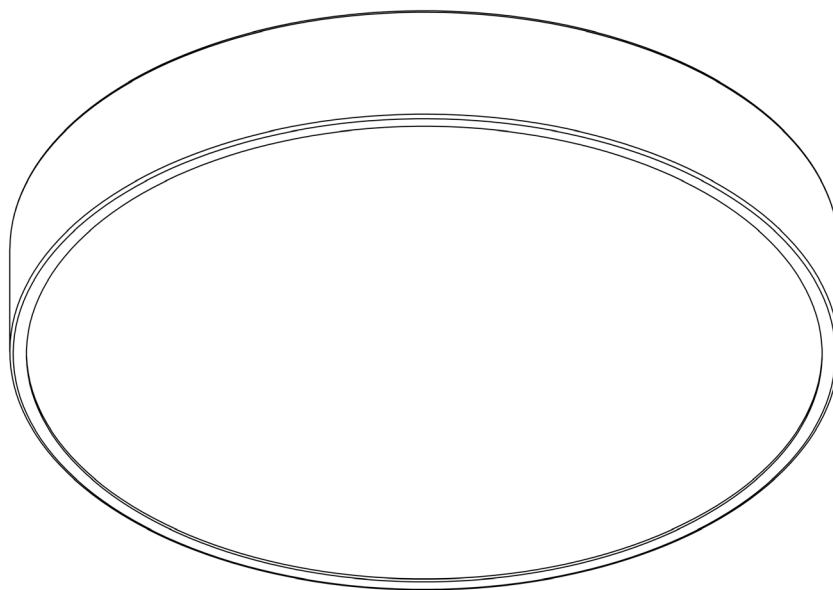

## A

### Fixed Output.


- Neutral
- Earth
- Live

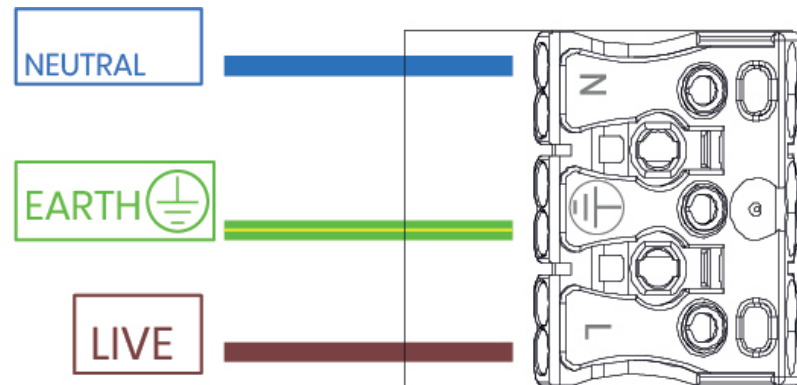

## B

### Fixed Output Emergency Wiring.


- Neutral
- Earth
- Live
- Unswitched Live

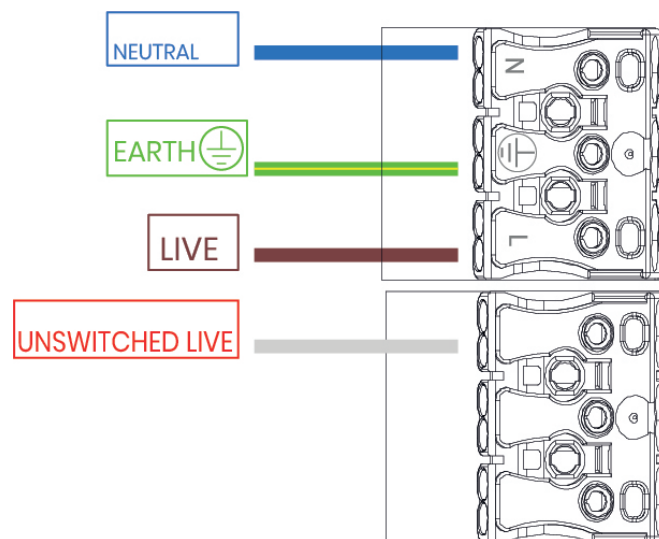

**C**

## DALI Wiring.


- Neutral
- Earth
- Live
- DALI
- DALI

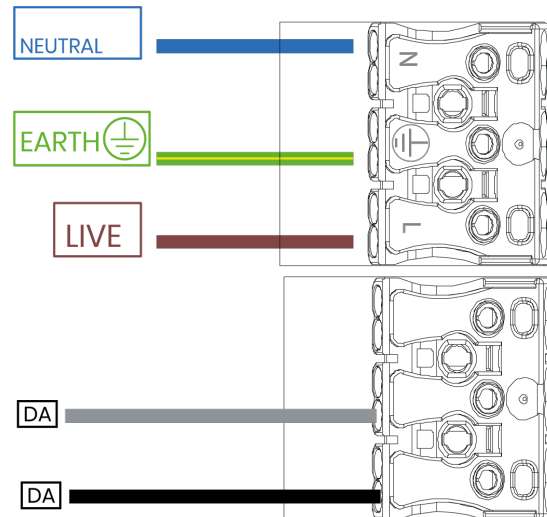

**D**

## DALI Emergency Wiring.

- Neutral
- Earth
- Live
- Unswitched Live
- DALI
- DALI

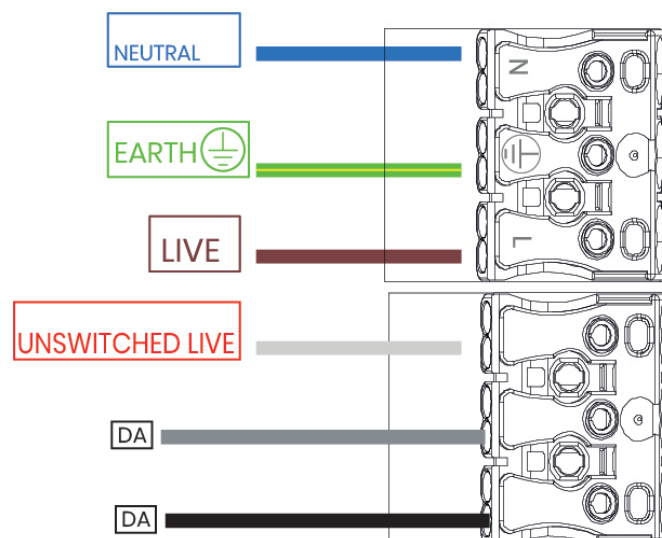





## E

### SwitchDIM Wiring.

- Neutral
- Earth
- Live
- Variable Live

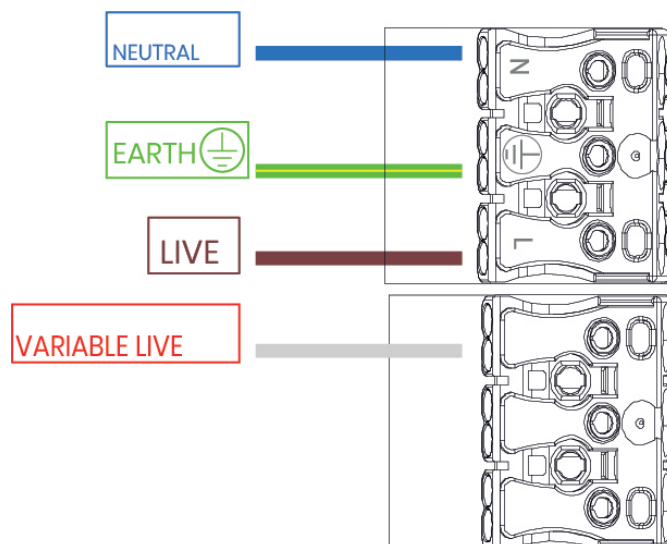

Example switchDIM circuit  
220-240 V  
0/50/60 Hz

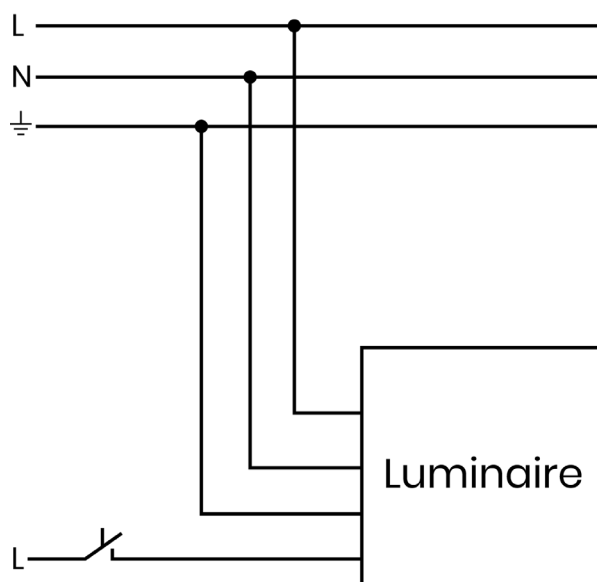

NOTES

NOTES

## DRM

 
 
### Safety

- This luminaire should be installed by a qualified electrician in compliance with IEE regulations.
- Please ensure mains supply to luminaire is disconnected before installation or maintenance.
  - The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

### Ratings

- This luminaire is designed to operate at 230VAC  
-6% +10% 216v to 252v.  
DO NOT OPERATE OUTSIDE THIS RANGE.
- This luminaire is only suitable for installation within its rated ingress Protection limits.

Subject to change without notice. Errors and omission excepted.  
Always make sure to use the most recent release.



CROWN HOUSE, PLANTATION RD,  
BURSCOUGH, LANCASHIRE. L40 8JT  
01704 891 333  
[www.pandaprojects.co.uk](http://www.pandaprojects.co.uk)