


TL-TRK

90 & 125mm

Slimline Track mounted Spotlight.

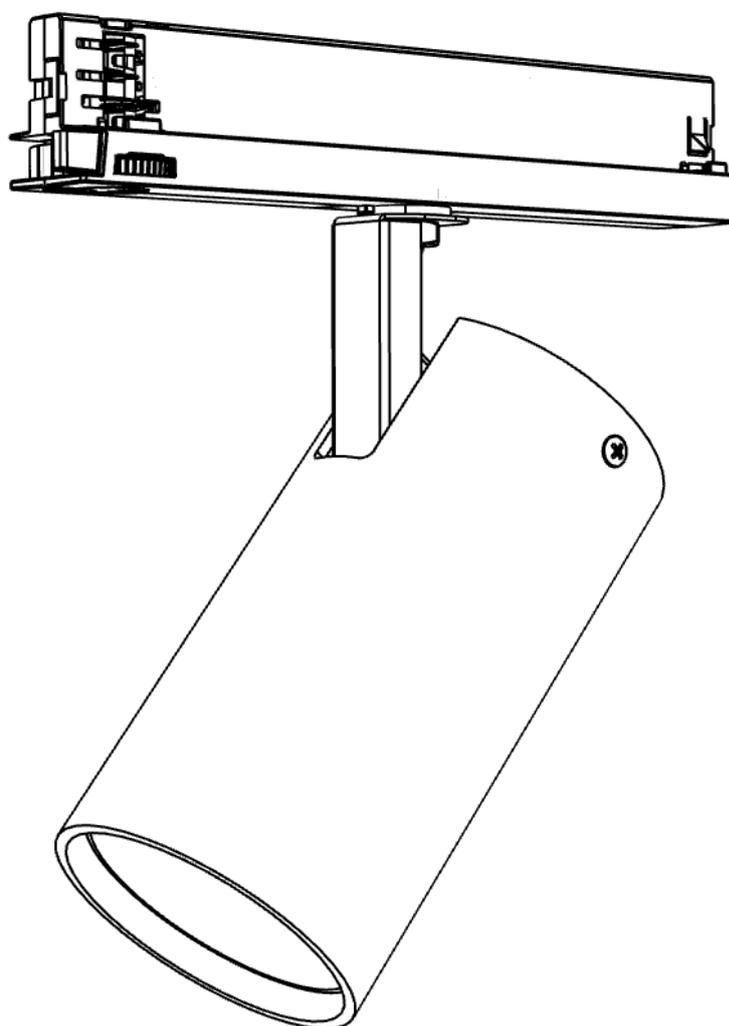


P&A

TL-TRK


As Standard

- Simple tool free installation, No wiring required.
- Luminaire.
- Pre Installed on to In Track Driver.
- Please check thoroughly before installing and report any missing components.

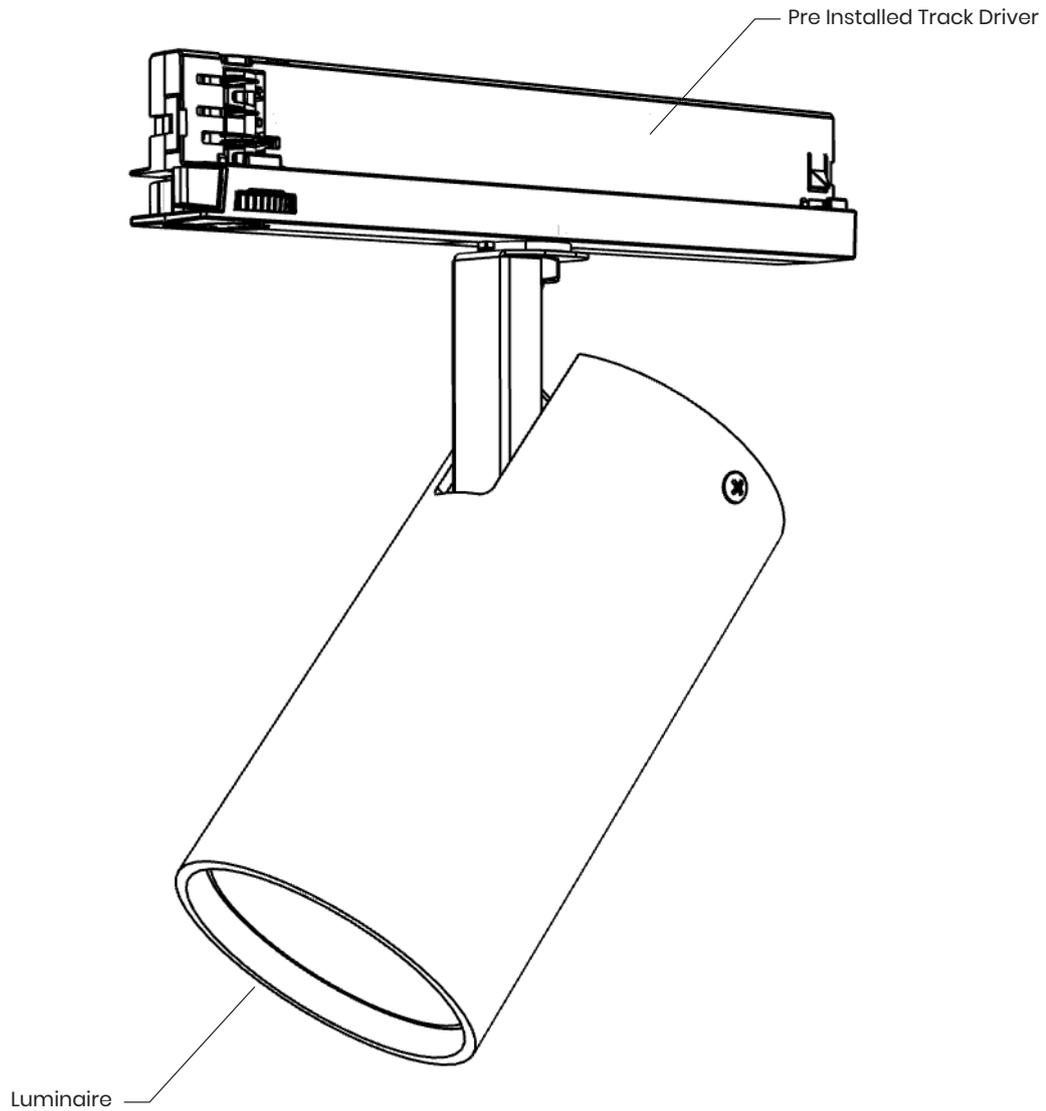


TL-TRK

- 1 Offer up luminaire complete (A) with driver into track, Please ensure key in adaptor (B) matches groove in track.

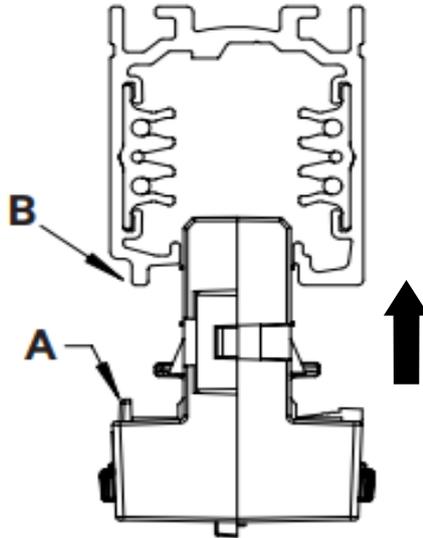


- 2 Lock driver into place, using locking lever. Rotate 90° until it reaches the locking position.

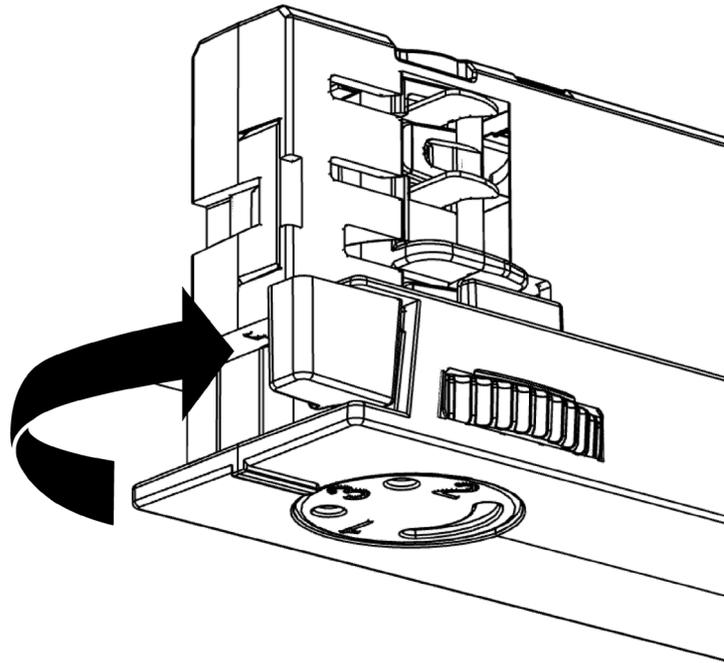

TL-TRK


3

When connected to three phase system, it is possible to select phase (L1, L2 or L3) by rotating the dial. For single phase track please select L1.

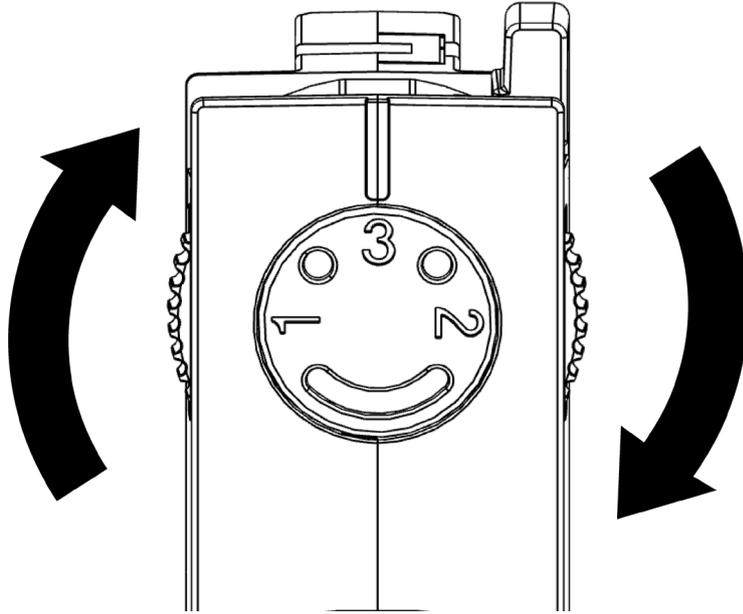

4

Complete installation (Front view).

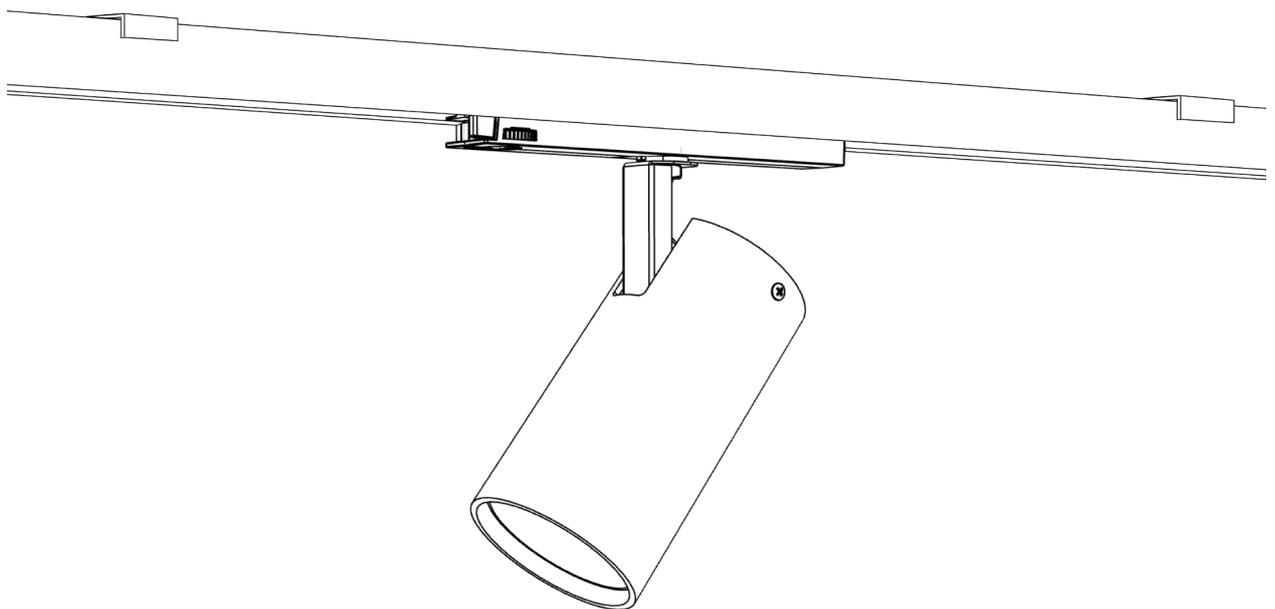

NOTES

NOTES

NOTES

TL-TRK

 
Safety

- This luminaire should be installed by a qualified electrician in compliance with IEE regulations.
- Please ensure mains supply to luminaire is disconnected before installation or maintenance.
 - The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Ratings

- This luminaire is designed to operate at 230VAC
-6% +10% 216v to 252v.
DO NOT OPERATE OUTSIDE THIS RANGE.
- This luminaire is only suitable for installation within its rated ingress Protection limits.

Subject to change without notice. Errors and omission excepted.
Always make sure to use the most recent release.



CROWN HOUSE, PLANTATION RD,
BURSCOUGH, LANCASHIRE. L40 8JT
01704 891 333
www.pandaprojects.co.uk