


Globe

Decorative pendant Luminaire

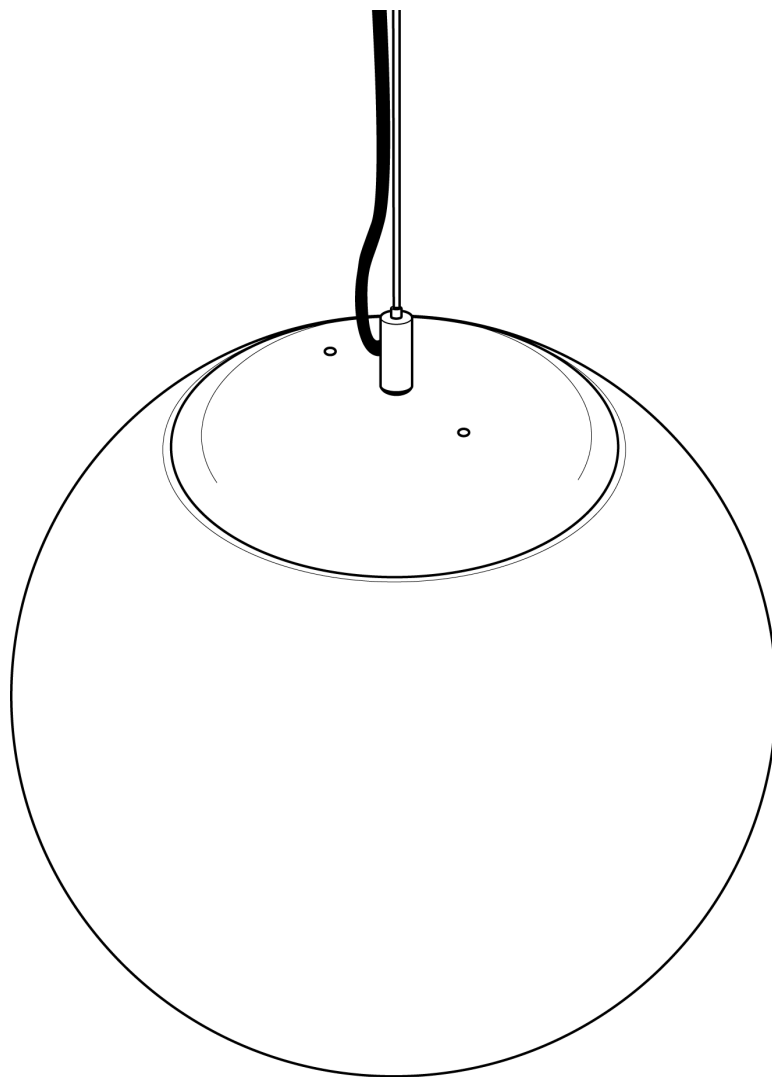


P&A

GLOBE


As Standard

- Integral driver.
- Ceiling Rose (Conical as standard).
- 3m Suspension wire.
- Luminaire Supply (Lengths as per order).
- Please check thoroughly before installing and report any missing components.

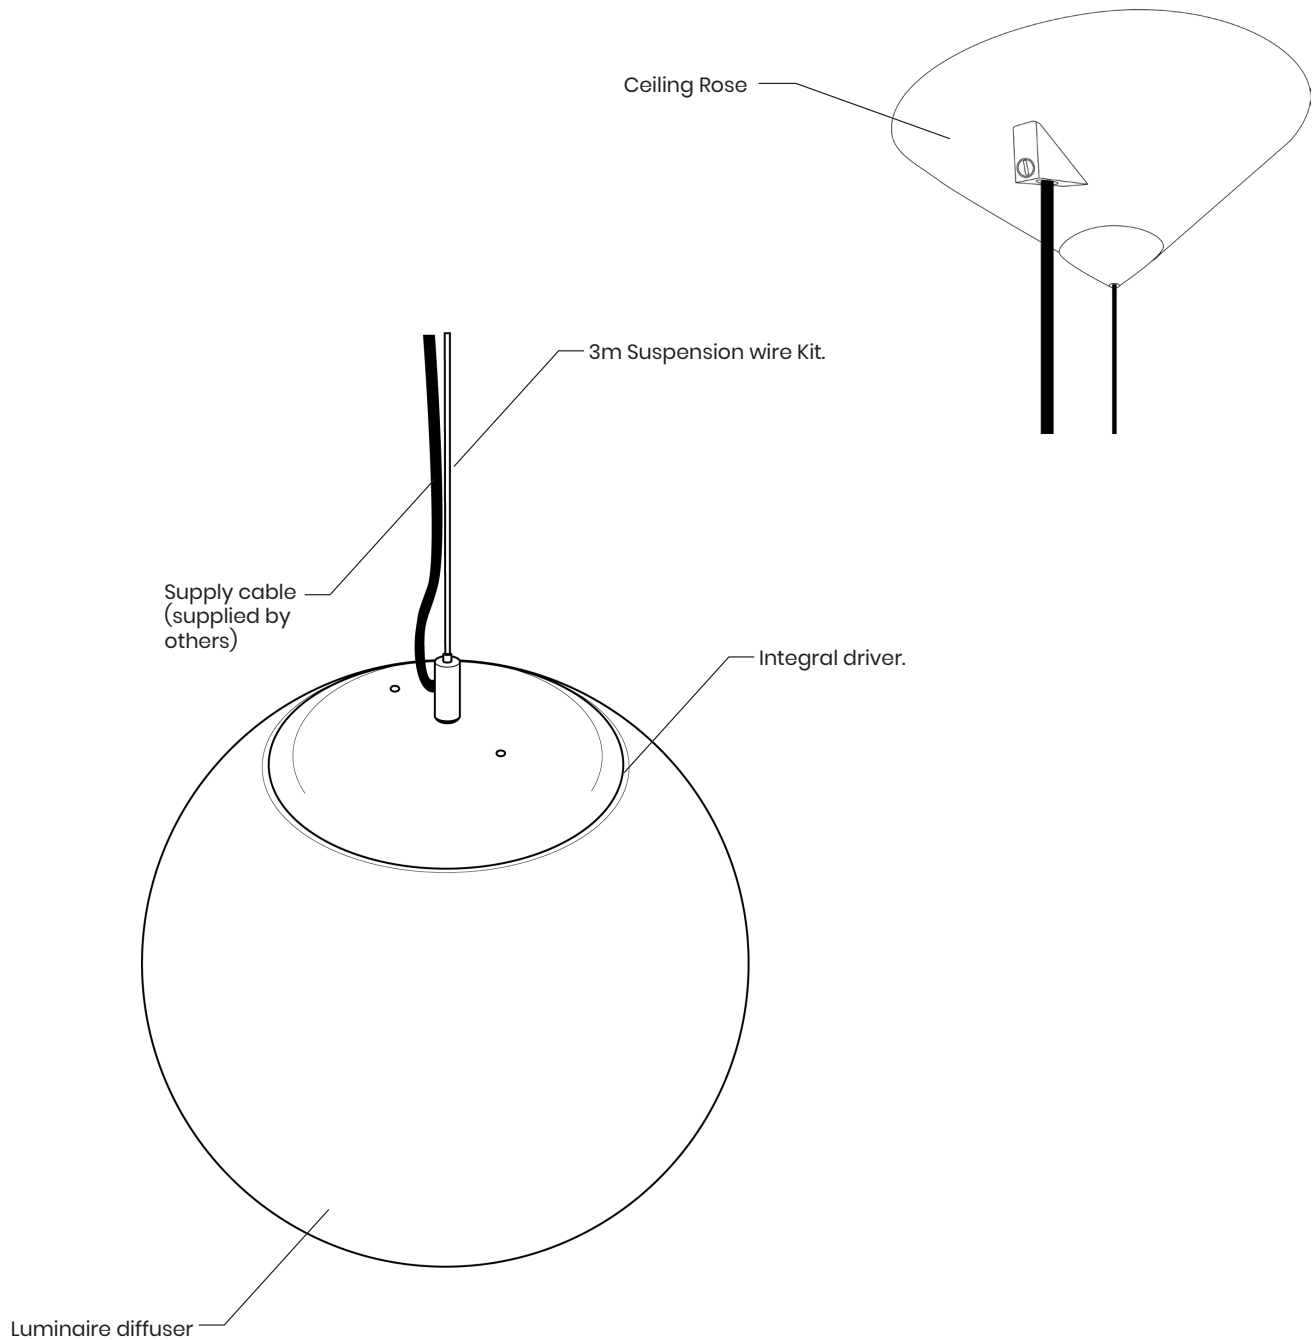

1


Install ceiling rose mounting bracket using appropriate (M4) fixings (Supplied by others).

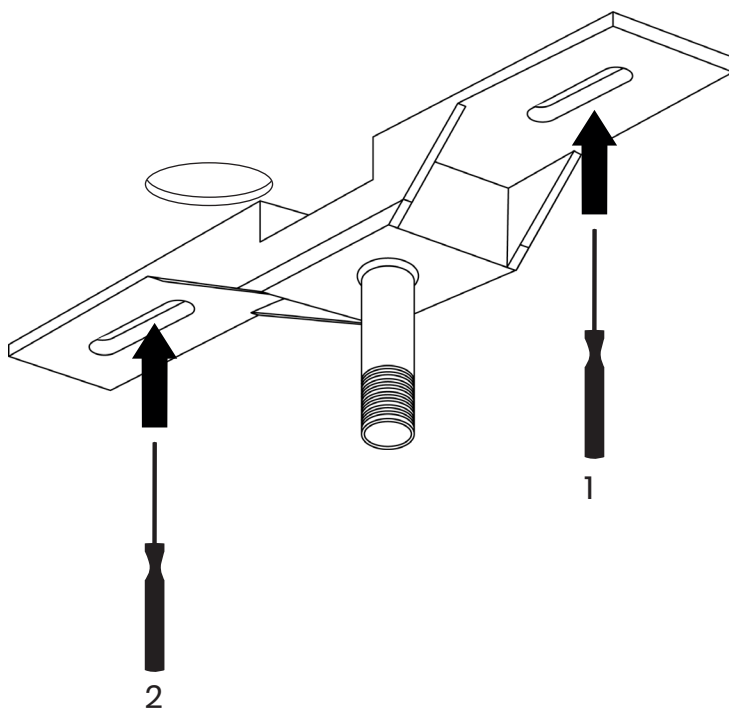


2

A. Feed supply cable (supplied by others) through cable cut-out
B. Connect to pre supplied connector block


A

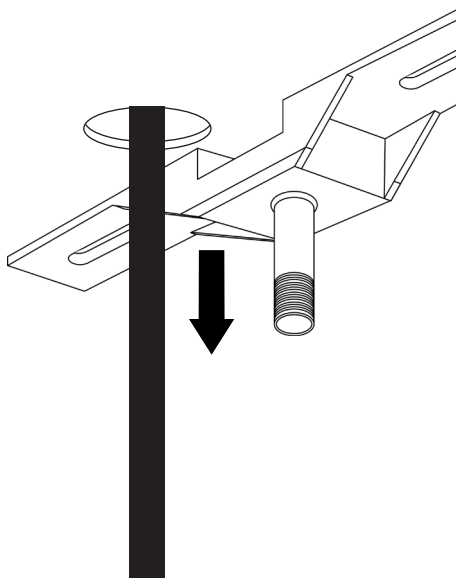


B

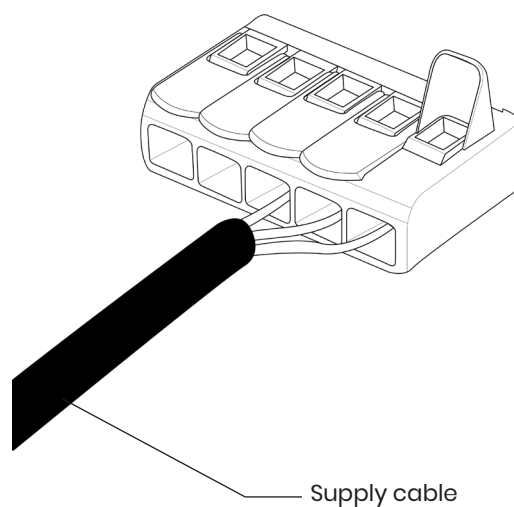

- 3** Feed luminaire supply cable (pre supplied) through ceiling rose cover.

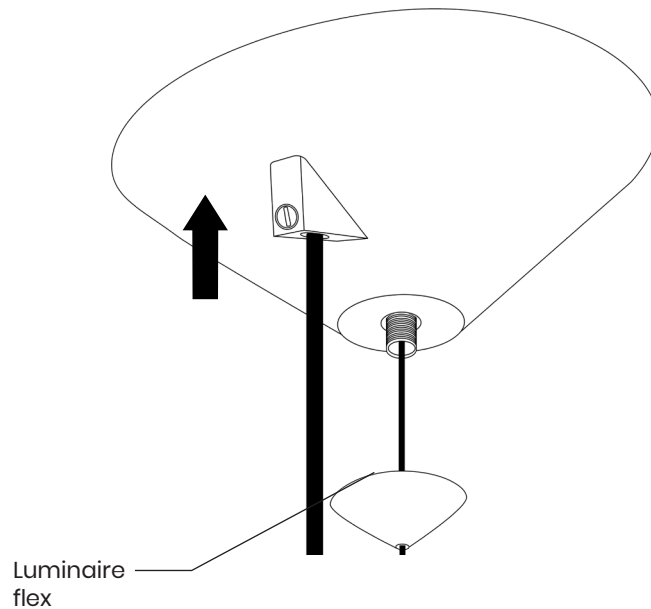


- 4** Connect luminaire supply to pre supplied connector block.

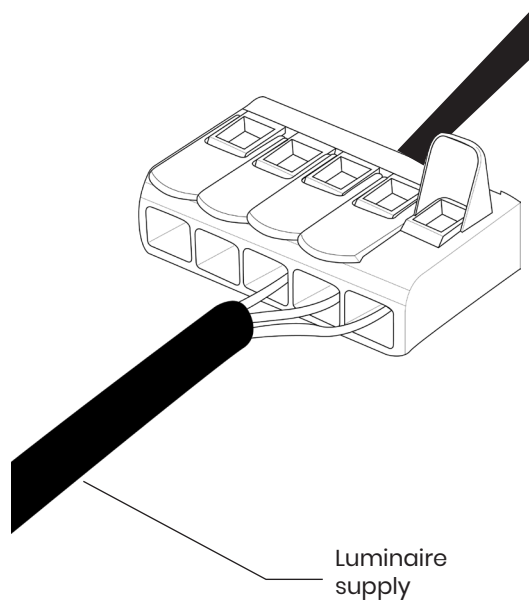


GLOBE

- 3** Slide the ceiling rose cover up, so it slots over surface mounting bracket, fix in place by tightening the front cap (turn clockwise)

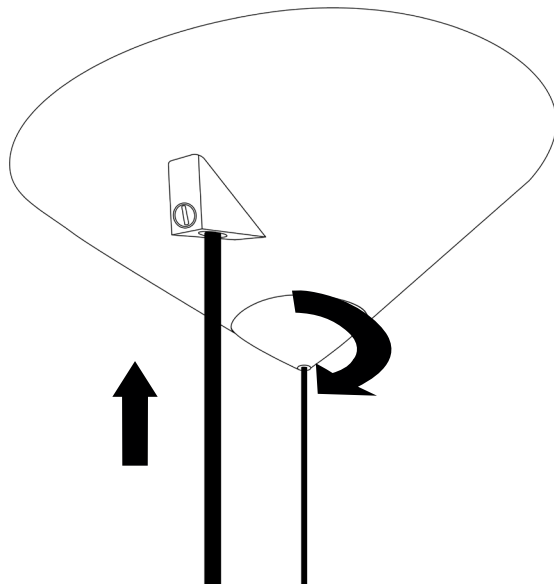


- 4** Tighten cable restraint using a flat headed screwdriver (Not supplied).

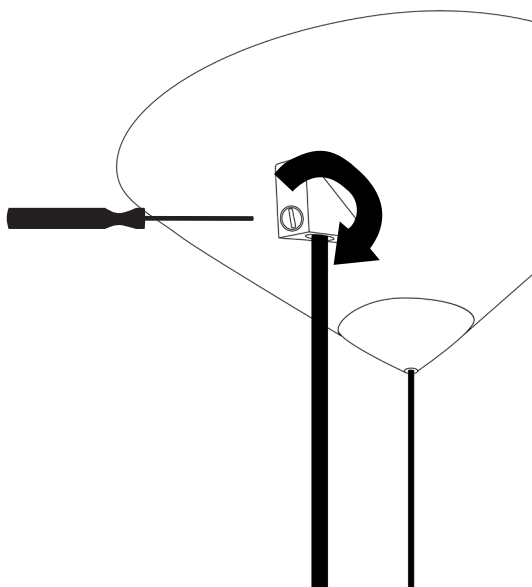

5

Complete installation (Rear view).

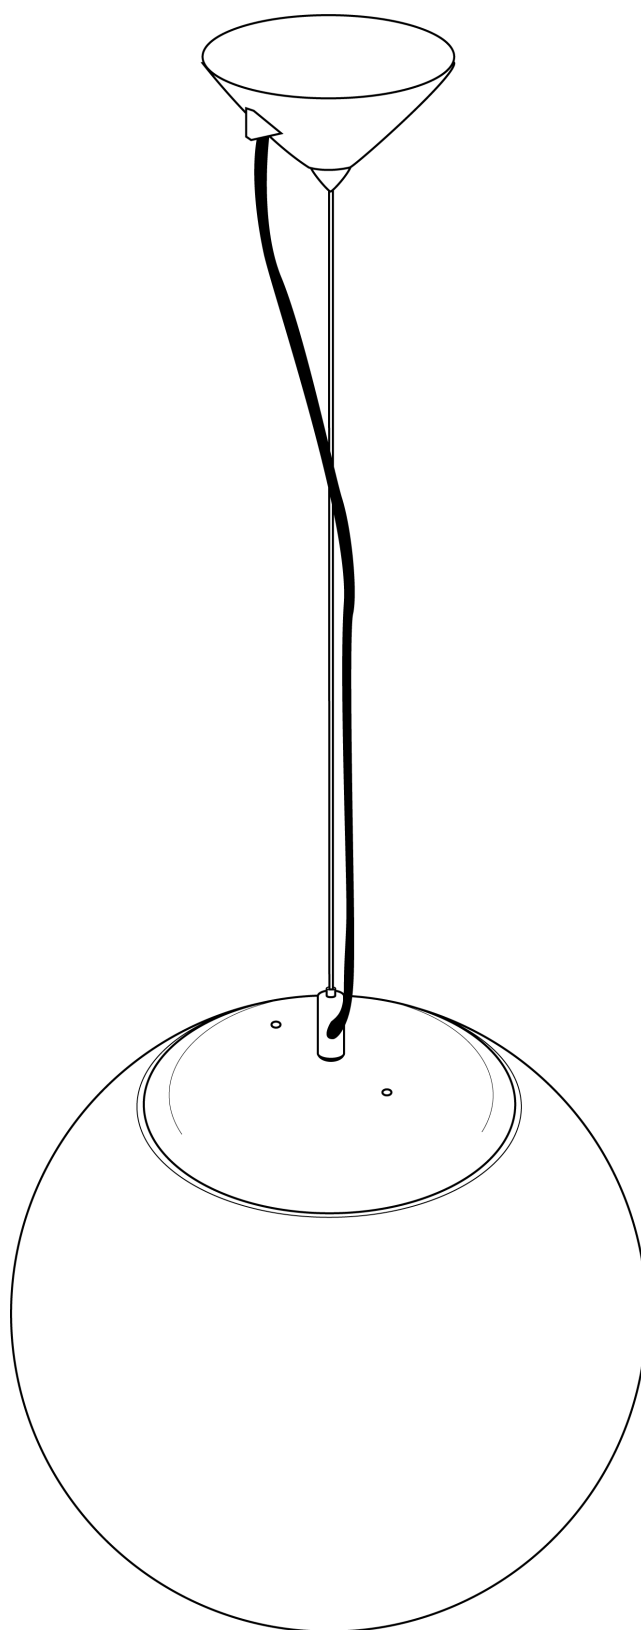

NOTES

GLOBE

 
 
Safety

- This luminaire should be installed by a qualified electrician in compliance with IEE regulations.
- Please ensure mains supply to luminaire is disconnected before installation or maintenance.
 - The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Ratings

- This luminaire is designed to operate at 230VAC
-6% +10% 216v to 252v.
DO NOT OPERATE OUTSIDE THIS RANGE.
- This luminaire is only suitable for installation within its rated ingress Protection limits.

Subject to change without notice. Errors and omission excepted.
Always make sure to use the most recent release.



CROWN HOUSE, PLANTATION RD,
BURSCOUGH, LANCASHIRE. L40 8JT
01704 891 333
www.pandaprojects.co.uk