


FP6/12


Edge lit panel luminiare.

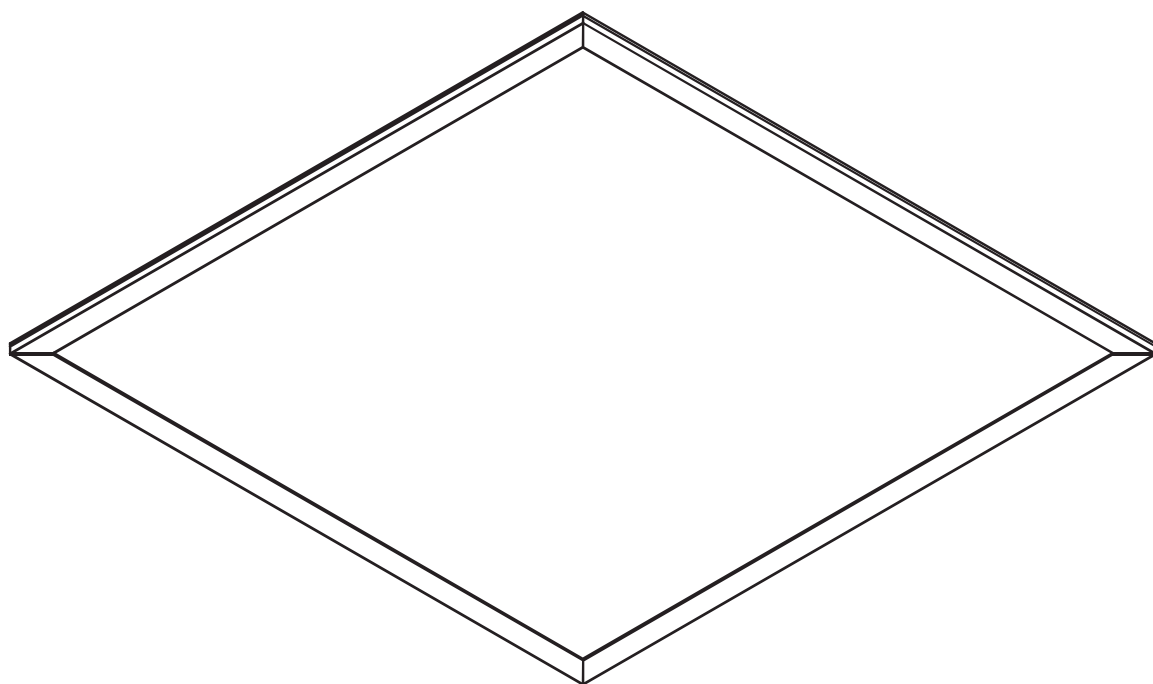

P&A

As Standard


- Luminaire.
- Fly lead + Remote Gear
- Please check thoroughly before installing and report any missing components.

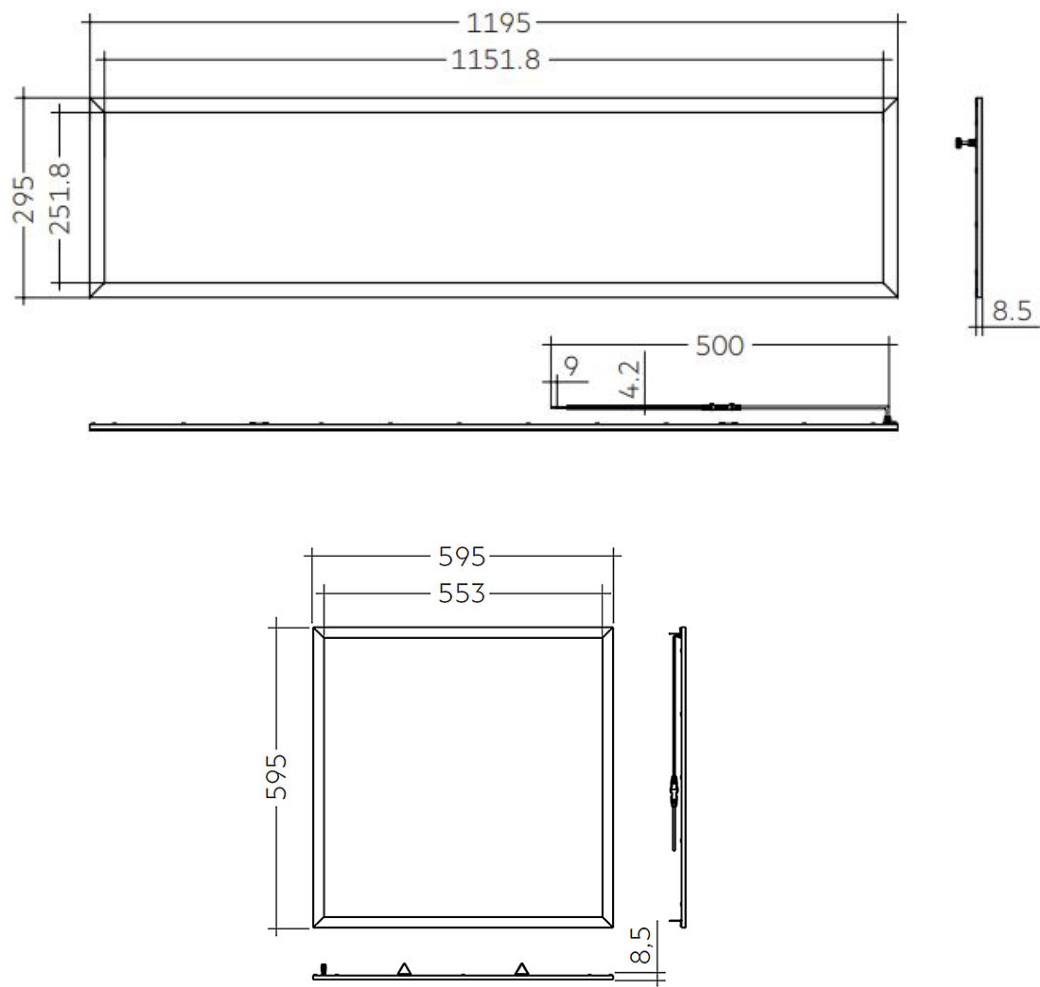


Nominal Dimensions				
Products				
	L	W	H	Kg
FP6	595	595	8.5	2.65
FP6(TW)	595	595	8.5	2.65
FP12	1195	295	8.5	2.55

1

“Lift and tilt” Installation.
Angle the luminaire to fit through the aperture.

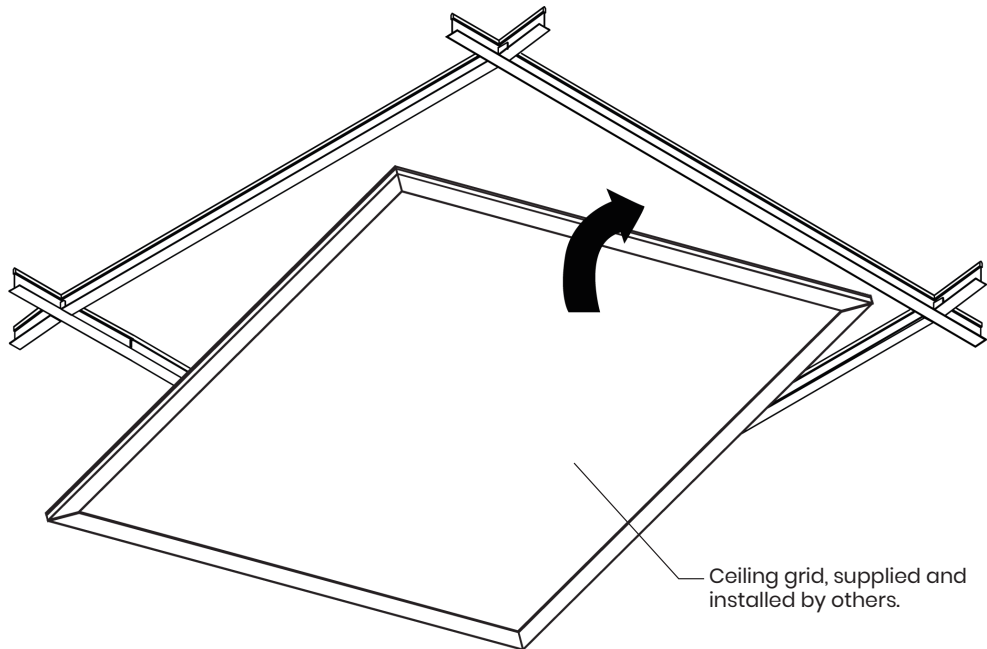
**2**

Then lower onto the tee bars/ceiling grid.

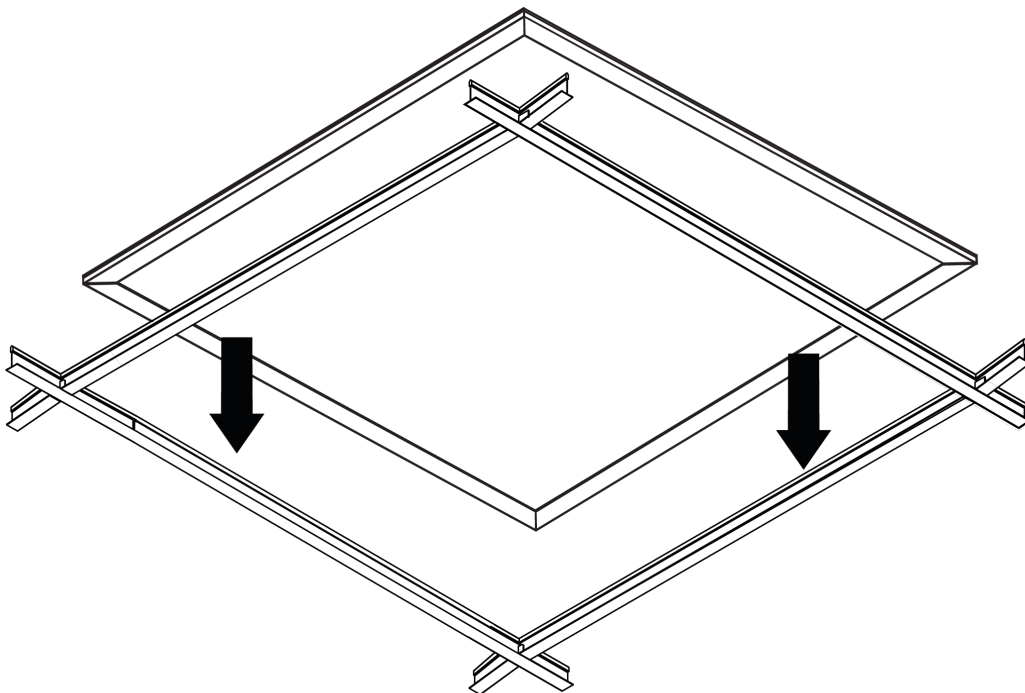


3


Remove adjacent ceiling tile to access rear of panel.

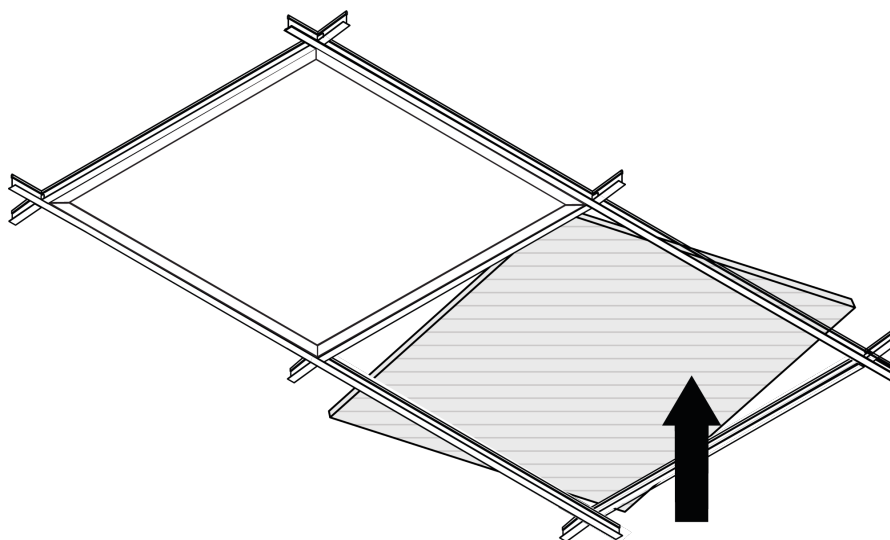**4**

Connect Fly lead to remote driver. (See pages 6 to 8 for wiring diagrams).

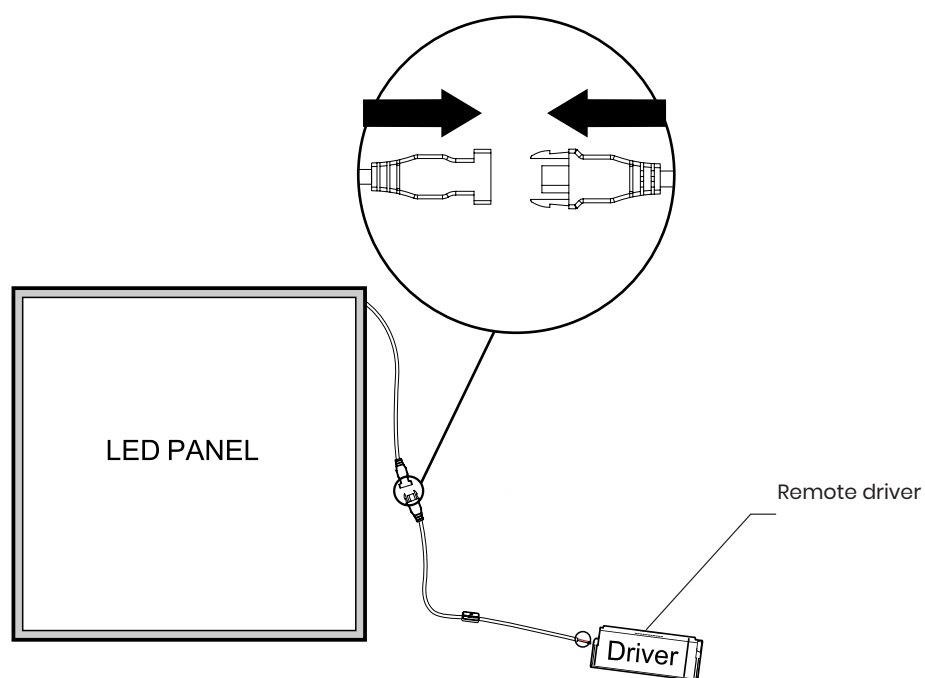


5 Completed Installation (front view).

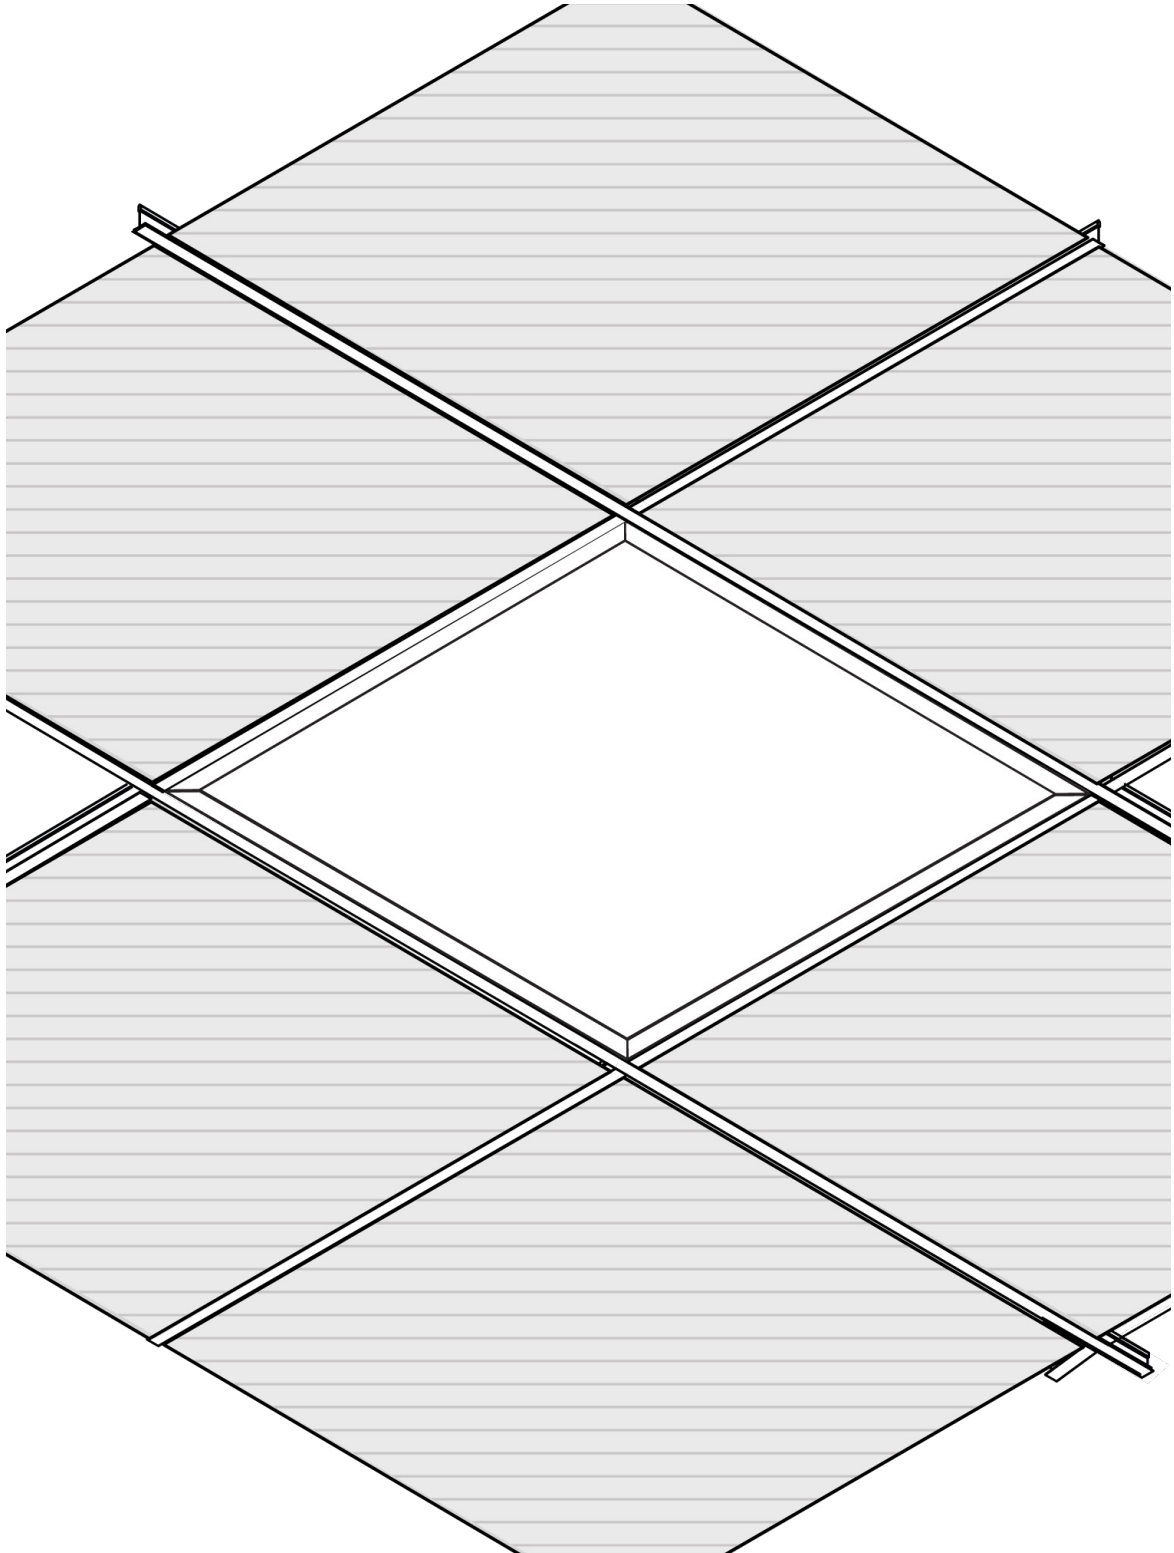


A Fixed Output.

- Earth
- Live
- Neutral

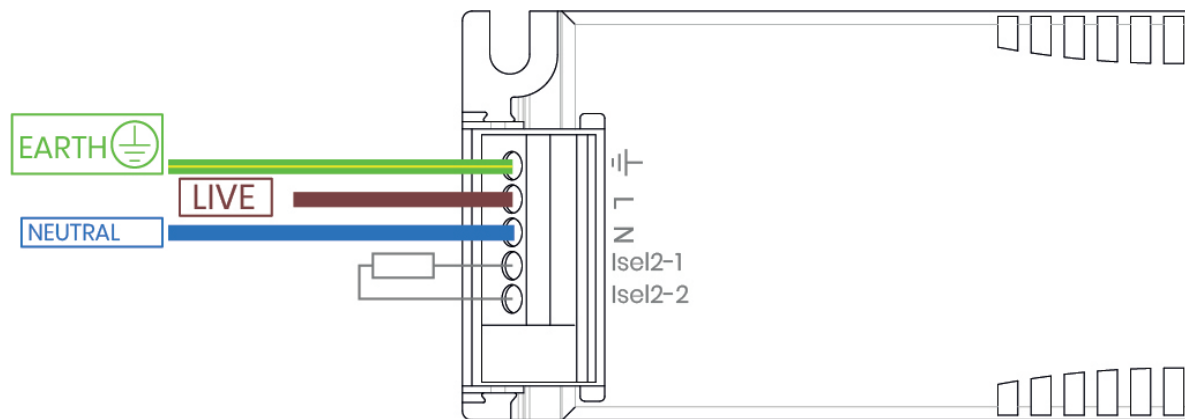


B Fixed Output Emergency Wiring.

- Neutral
- Earth
- Live
- Unswitched Live

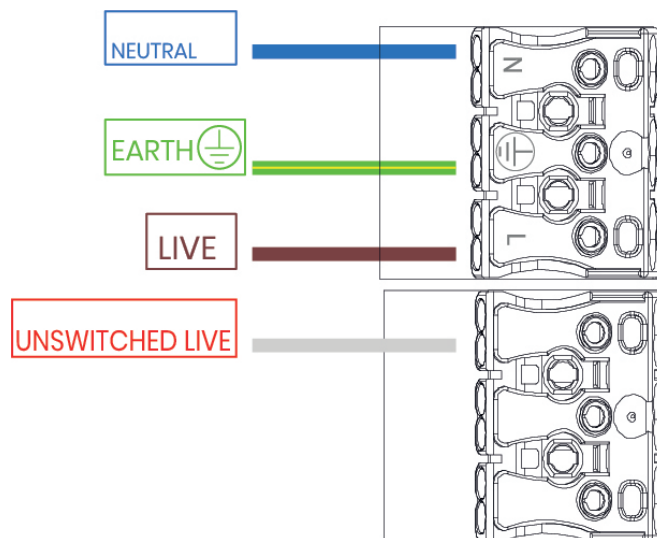


C DALI Wiring.

- Live
- Earth
- Neutral
- DALI
- DALI

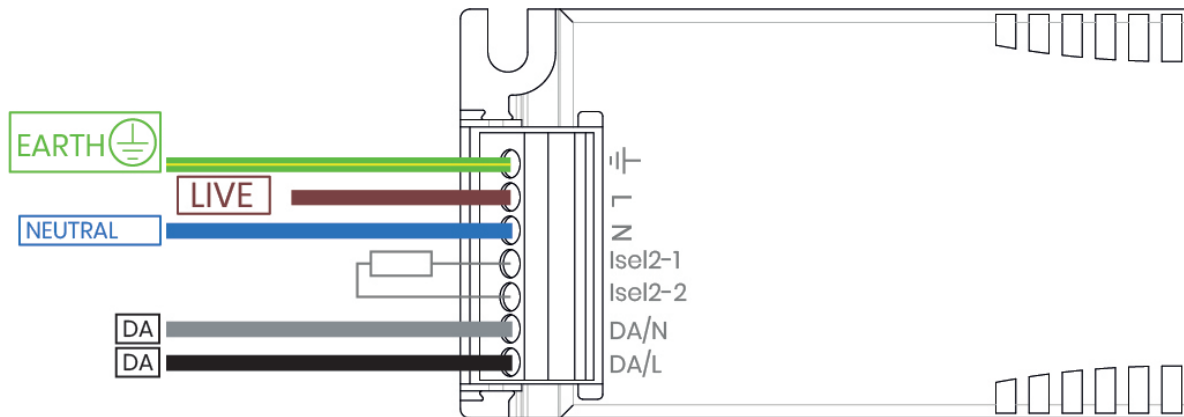

D DALI Emergency Wiring.


- Live
- Earth
- Neutral
- Unswitched Live
- DALI
- DALI

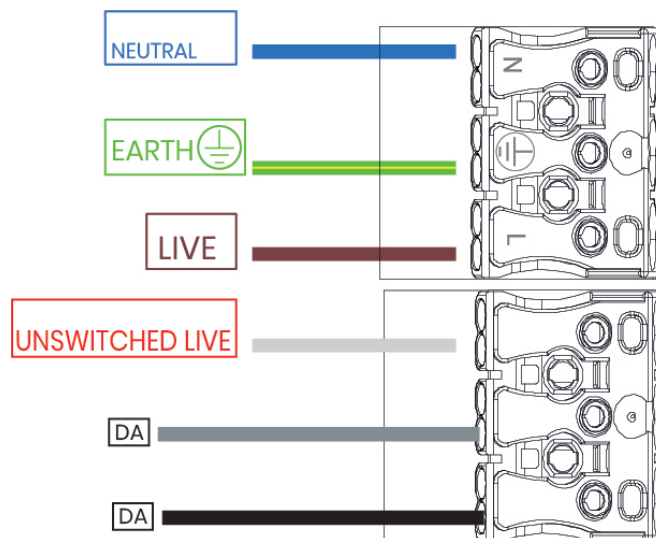


E

SwitchDIM Wiring.

- Live
- Earth
- Neutral
- Variable Live

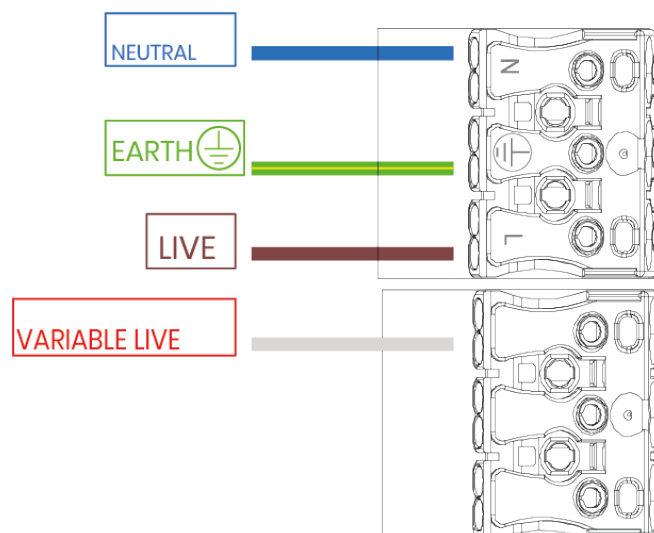

Example switchDIM circuit
220-240 V
0/50/60 Hz

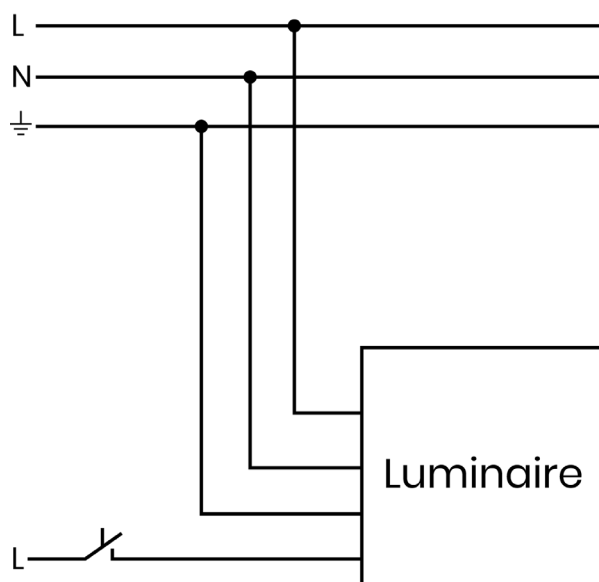

NOTES

NOTES

NOTES

 
Safety

- This luminaire should be installed by a qualified electrician in compliance with IEE regulations.
- Please ensure mains supply to luminaire is disconnected before installation or maintenance.
 - The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Ratings

- This luminaire is designed to operate at 230VAC
-6% +10% 216v to 252v.
DO NOT OPERATE OUTSIDE THIS RANGE.
- This luminaire is only suitable for installation within its rated ingress Protection limits.

Subject to change without notice. Errors and omission excepted.
Always make sure to use the most recent release.



CROWN HOUSE, PLANTATION RD,
BURSCOUGH, LANCASHIRE. L40 8JT
01704 891 333
www.pandaprojects.co.uk