
SubSpace TRI 600/900/1200mm

600/900/1200mm Suspended feature Luminaire

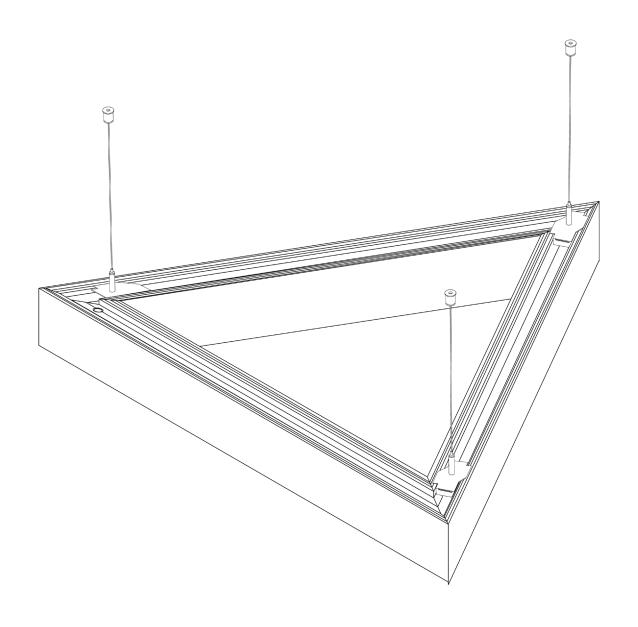




As Standard

- Luminaire.

- Indivdual wire suspension kit (As Stanadrd, See table below for qty).

 Pre Installed suspension clutches (See table below for qty).


 Please check thoroughly before installing and report any missing components.

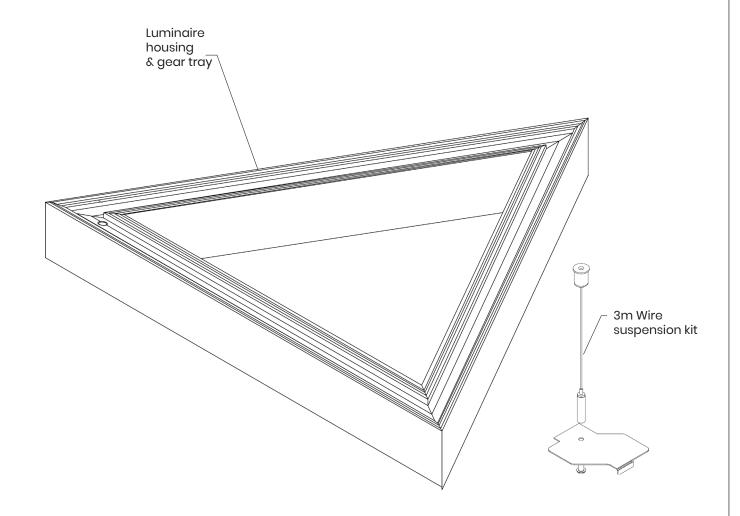

Nominal Diamters				
Products				
	DØ	Н	Kg	No. Suspension Points
SST6	600	85	6	3
SST9	900	85	9	3
SST12	1200	85	11	3




For Individual or continuous systems ,Install female ceiling boss using an M6x1 Screw.
(Appropriate fixings supplied by others)

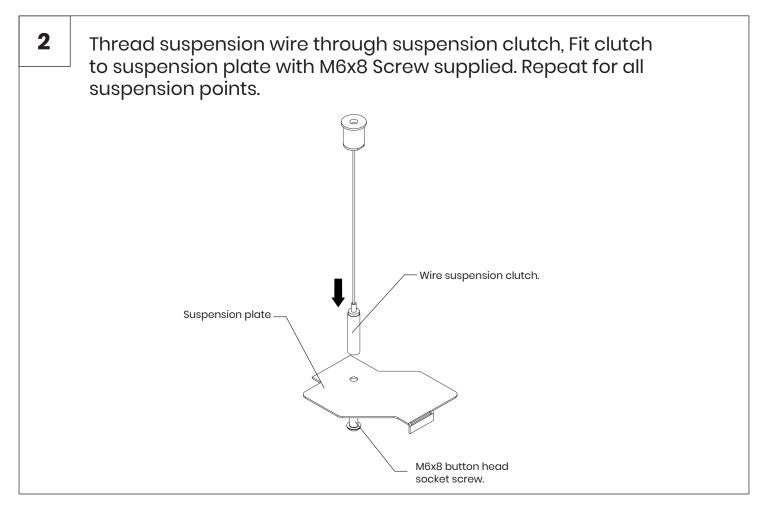




A. Offer up luminaire body to suspension kit, B. rotate suspension plate into grooved channel on the back of the luminaire. C. Bend down easy form tab to secure suspension plate into place. Repeat for all suspension points.

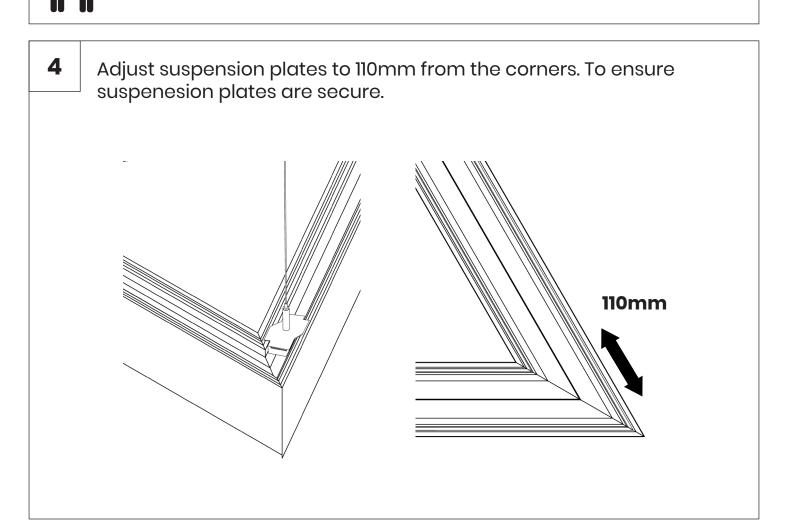




Remove front diffuser using pre installed release tabs, store diffuser safely until required later.

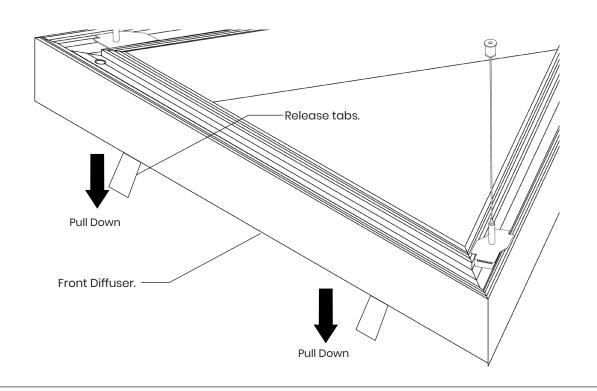


Press gear tray releasing springs and gently pull gear tray out that is next to cable entry point. (All adjoining gear trays are pre connected to this gear tray)

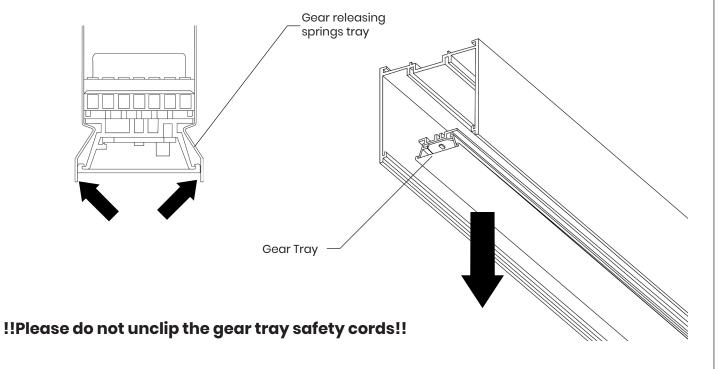





Feed Incoming flex (provided by others) through the cable gland. Connect feed into the terminal block (See pages 9-11 for all wiring diagrams).

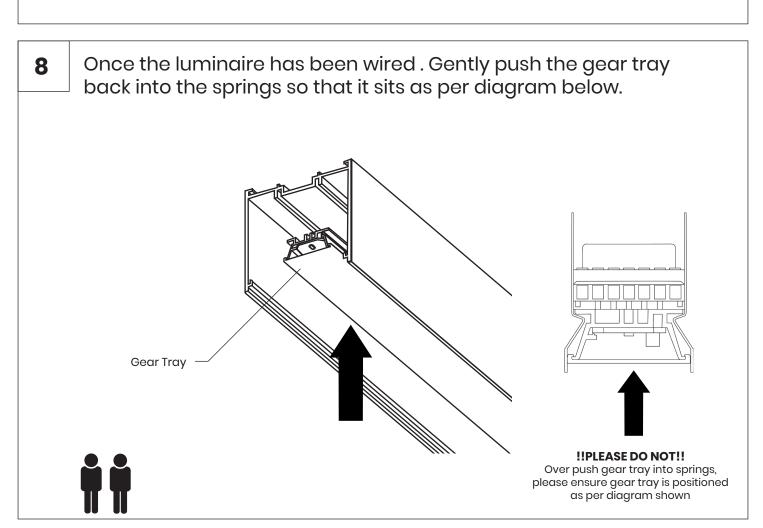



9 Re install the diffusers back into the main housing ensuring they all click back into the body evenly.

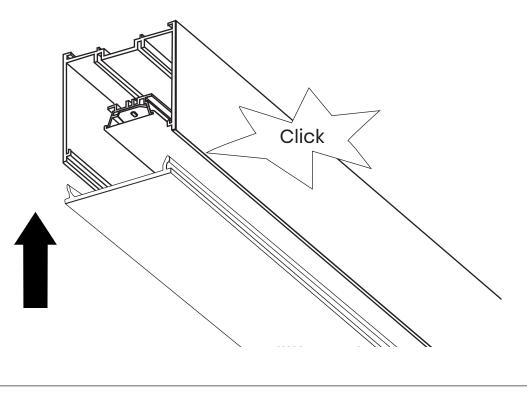


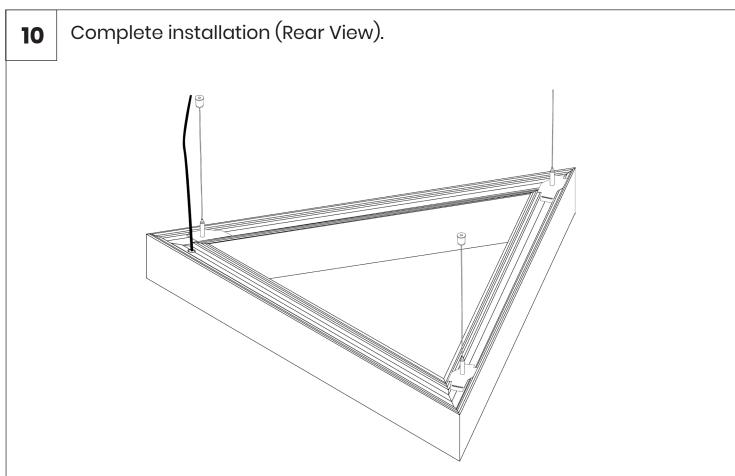




A Fixed Output.

- Live
- Earth
- Neutral

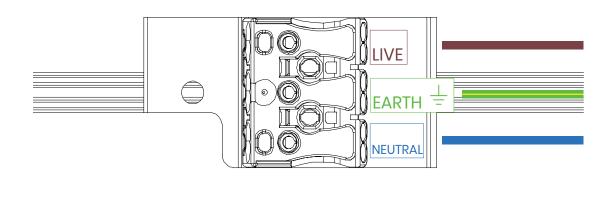

B Fixed Output Emergency Wiring.

- Live
- Earth
- Neutral
- Unswitched Live

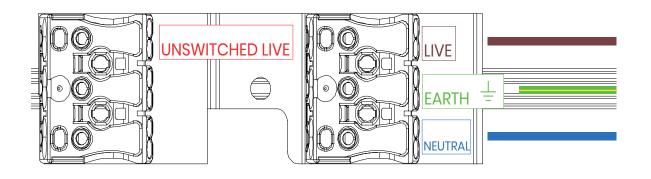




C

DALI Wiring.


- Live
- Earth
- Neutral
- DALI
- DALI

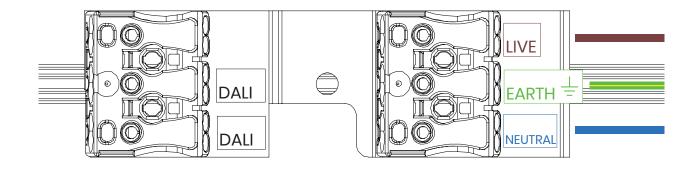

D

DALI Emergency Wiring.

- Live
- Earth
- Neutral
- Unswitched Live
- DALI
- DALI

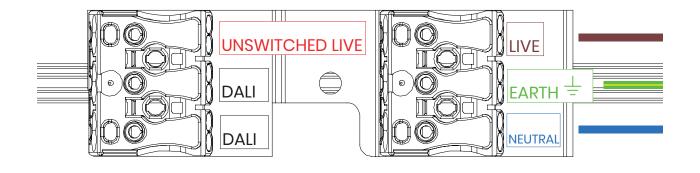





Ε

SwitchDIM Wiring.

- Live
- Earth
- Neutral
- Variable Live

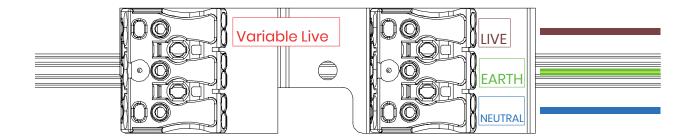

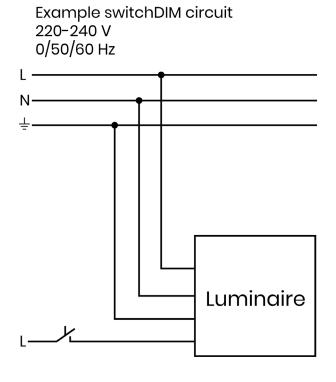



NOTES



Safety

- This luminaire should be installed by a qualified electrician in compliance with IEE regulations.
 - Please ensure mains supply to luminaire is disconnected before installation or maintenance.
 - The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Ratings

- This luminaire is designed to operate at 230VAC -6% +10% 216v to 252v. DO NOT OPERATE OUTSIDE THIS RANGE.
- This luminaire is only suitable for installation within its rated ingress Protection limits.

Subject to change without notice. Errors and omission excepted. Always make sure to use the most recent release.















CROWN HOUSE, PLANTATION RD, BURSCOUGH, LANCASHIRE. L40 8JT 01704 891 333 www.pandaprojects.co.uk